


## TABELLE RICAMBI / SPARE PARTS TABLES

SENZA FRENO / WITHOUT BRAKE

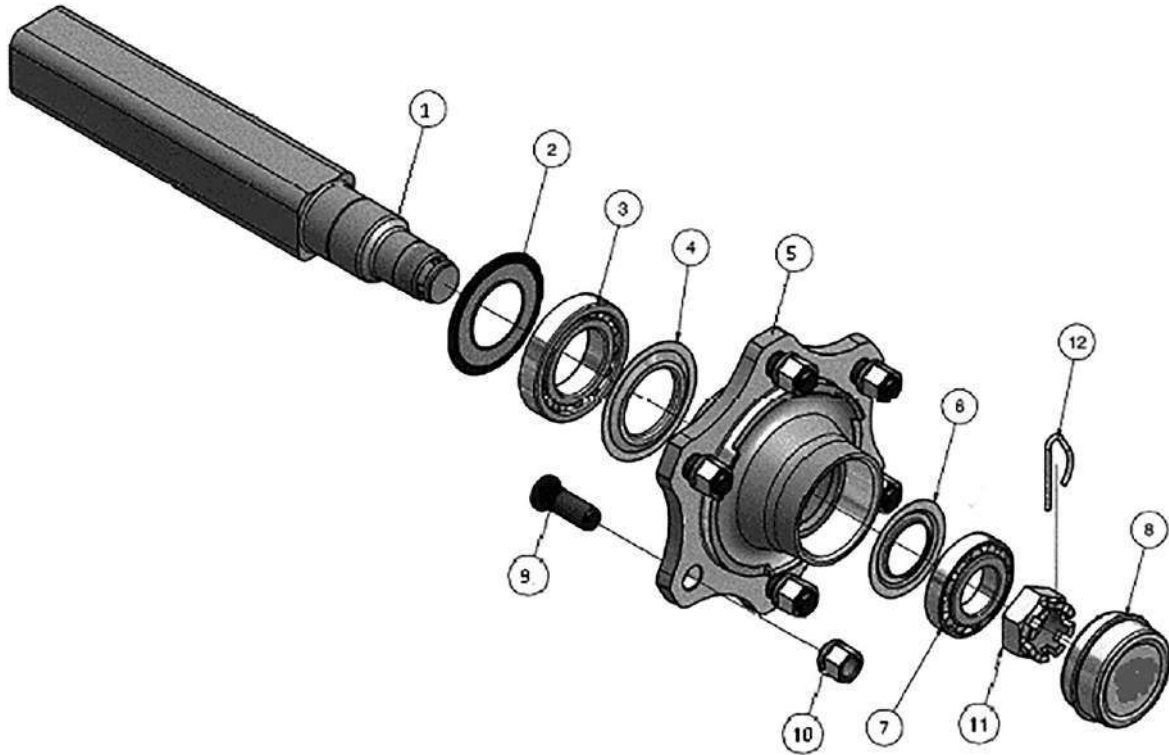

POSIZIONE POSITION	DESCRIZIONE DESCRIPTION
1	BILLETTA TORNITA / AXLE SHAFT
2	PARAPOLVERE DI TENUTA / RETAINING RING
3	CUSCINETTO INTERNO / INNER BEARING
4	NILOS INTERNO / INNER NILOS
5	MOZZO / HUB
6	NILOS ESTERNO / OUTER NILOS
7	CUSCINETTO ESTERNO / OUTER BEARING
8	CALOTTA / CAP
9	COLONNETTA / WHEELSTUD
10	DADO COLONNETTA / WHEEL NUT
11	DADO CORONA / CROWN NUT
12	COPIGLIA / SPLIT PIN